



ESD Microscope

JBM-EPL45

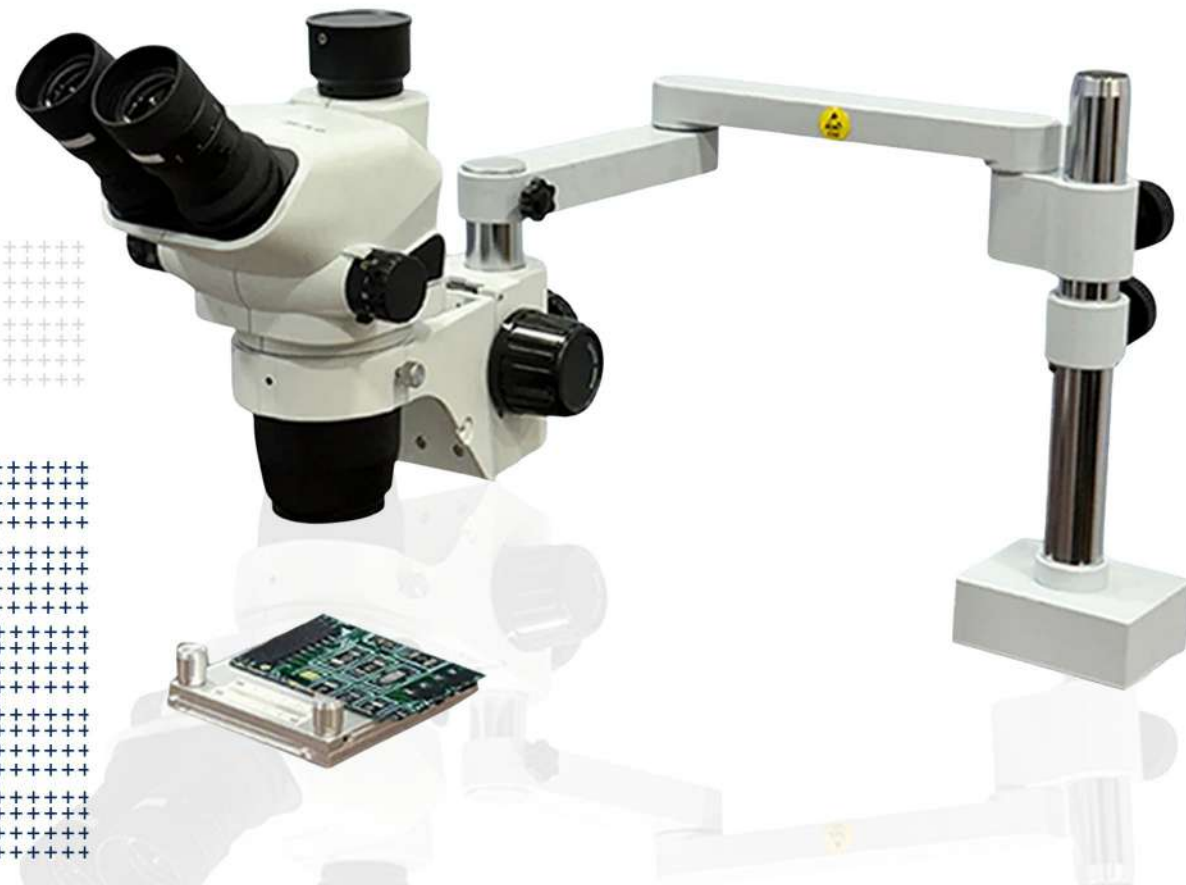

JB Microscopes ESD Safe series models feature high-quality achromatic lenses with anti-reflective coatings for superior visual clarity. You can choose the best microscope for your need by Series, or if you specifically require an ESD-safe solution. JB Microscopes provide superior quality and performance for the demands of industrial inspection, assembly, rework and quality control environments. JBM-EPL-45 is the newest addition to our industry renowned, ergonomic microscope for Electronic Industries. The ergonomic features of the System JBM-EPL45 are ideal for prolonged use and offer added flexibility for multiple operator usage. Distortion free viewing through a high quality, 22mm optics system provides a 0.67X-45X magnification range. Easy to adjust, tilting binocular eye tube can be inclined from 0 to 30° and the ocular can be rotated 180° to increase the height by an additional 3 inches.

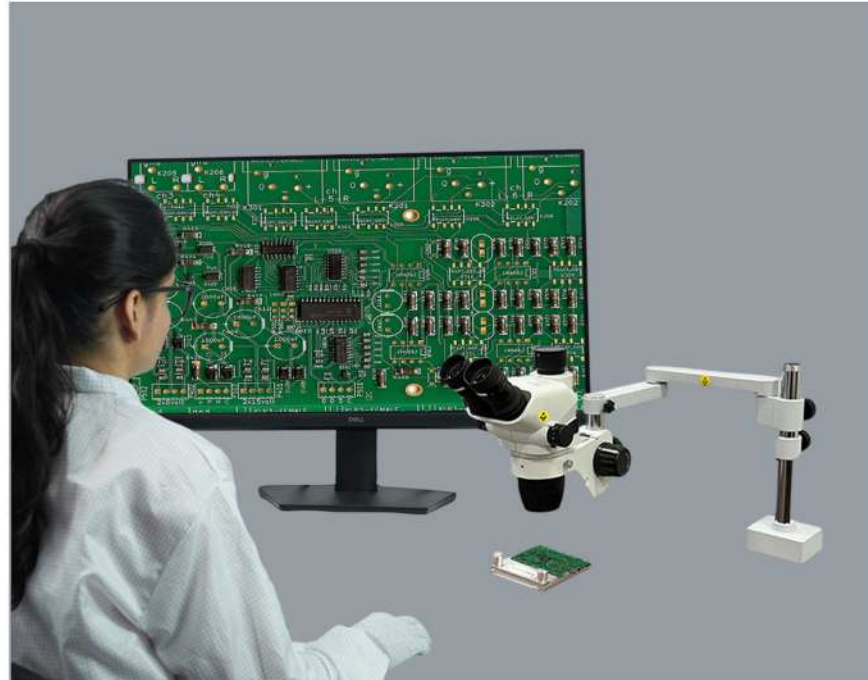

Brand Name	JB MICROSCOPE
MODEL	JBM-EPL45
OPTICS	p110X/eyepieces, 22mm field of view.
MAGNIFICATION	• 0.67X – 45X and 186mm of working distance with • 0.5X Auxiliary lens (included).
LENSES	High-quality achromatic lenses with anti-reflective coatings
ERGONOMICS	Eye tubes tilt 0 to 30° and rotate 180° allowing for a 3-inch increase in height. 360° head rotation in its focus mount
ZOOM	0.67X – 4.5X zoom range controlled by dual graduated knobs Click-Stop positions located on both sides of the head
CONSTRUCTION	Polymer/Metal body (2 part)
MOUNTING	tereo Microscopes JBM-EPL45 binocular models are available with the Ball Bearing Boom Stand with base or Articulating Arm with Vertical Extension and edge clamp.
LIGHTING	LED ring light or the High Output Dimmable LED ring light

[illegible]

+++++



J-9/36

RAJOURIGARDEN

NEW DELHI 110027

www.jbmicroscope.com

info@jbinstruments.com

+91 9354741245

+++++